# User Guide

# **RGB/RGBW RF Remote Controller**


#### Summary

- Apply to RGB or RGBW LED controller, dimming driver or smart lamp.
- Ultra sensitive color adjustment touch wheel.
- Adopt 2.4GHz wireless technology, remote distance up to 30m.
- Each remote can match one or more receiver.
- Battery powered (CR2032).
- Operate with LED indicator light.

#### **Technical parameter**

- Output signal: RF(2.4GHz)
- Working voltage : 3VDC(CR2032)
- Working current: < 20mA
- Standby current: <10µA</li>
- Standby time: 12 months
- Remote distance: 30m
- Working temperature: -30°C~55°C
- Dimension: L107×W58.5×H9mm
- Weight: 34g

### **Key function**

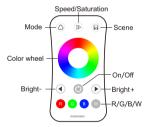

On/Off: Turn on/off light.

Color wheel: Touch to change static RGB color.

Mode: Short press run the next mode, long press 2s run mode cycle.

Speed/Saturation: For dynamic mode, adjust speed, short press 10 levels, long press 2s the default speed. For static color, adjust saturation, change current static color to mixed white slowly,

short press 11 levels, long press 1-5s continuous 256 levels adjustment.

Bright+/-: Adjust brightness, short press 10 levels, long press 1-5s continuous 256 levels adjustment.


R/G/B: Short press get red, green or blue color directly.

long press 1-5s continuous 256 levels adjust R/G/B brightness.

W: For RGB light, short press turn on/off white(RGB mix), long press 1-5s continuous 256 levels adjust saturation, namely change current static color to mixed white slowly.

For RGBW light, short press turn on/off W channel, long press 1-5s continuous 256 levels adjust W brightness. Scene: Short press run the scene, long press 2s save.

### Dimension

 

## Operation

- Pull out the plastic battery barrier sheet from the battery compartment located on the bottom of the remote.
- To extend battery life, no touch or press key operation after a few seconds, the touch wheel will enter sleep state, you need press any key to make touch wheel guit sleep state.

### Match guide

#### Remote match with 2.4G RF controller, dimming driver, smart lamp and panel controller. Match with controller(with match key)

- 1. Match: Short press match key, within 5s, press on/off key of the remote.
- 2. Delete: Long press match key for 5s, delete all matched remote.

#### Match with controller(without match key), dimming driver or smart lamp

 Match: Switch off the power, then switch on power again, short press on/off key 3 times on the remote quickly within 5s after power on, the link is done once the light blinks 3 times.

 Delete: Switch off the power, then switch on power again, short press on/off key 5 times on the remote quickly within 5s after power on, the unlink is done once the light blinks 5 times.

#### Match with panel controller

- 1. Match: Turn on light, turn off, immediately press on/off key for 5s,
  - within 5s, press on/off key of the remote.
- 2. Delete: Turn on light, turn off, immediately press on/off key for 10s, delete all matched remote.

## Safety information

- 1. Read all instructions carefully before you begin this installation.
- When installing battery, pay attention to the battery positive and negative polarity. A long time without the remote control, remove the battery. When remote distance becomes smaller and insensitive, replace the battery.
- 3. If no response from the receiver, please re-match the remote.
- 4. Gently handle remote, beware of falling.
- 5. For indoor and dry location use only.